


Initiating the "departure" mode in a heating zone

Document number: PO-097-EN Version: 1.0 Date of publication: April 11, 2022

In order to initiate the appropriate heating mode for one or multiple heating zones, you have to create a condition in the Ampio Smart Home configurator. Select a device that controls heating zones on the list and go to the *Device configurator*.

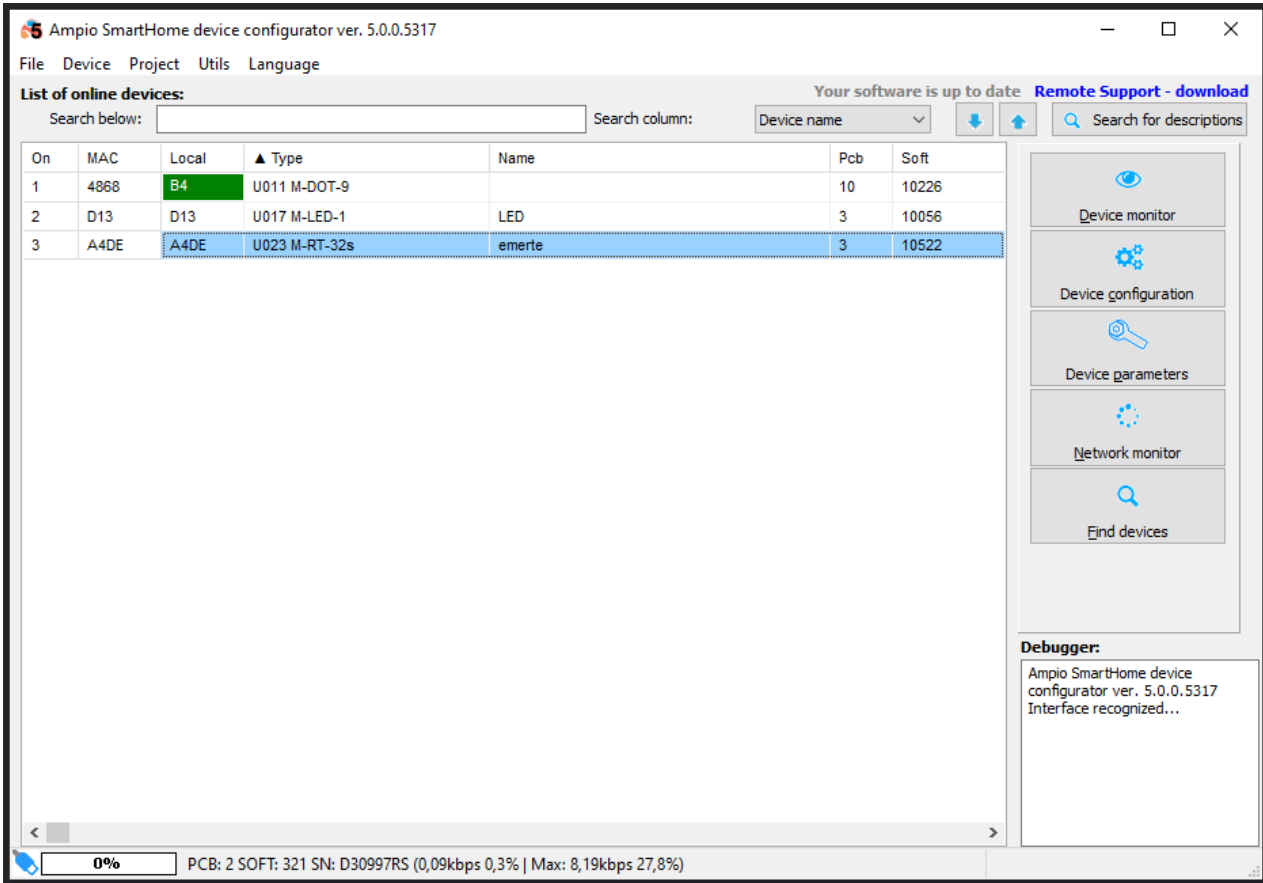


The screenshot shows the Ampio SmartHome device configurator interface. The main window displays a table of online devices. The table has columns for On, MAC, Local, Type, Name, Pcb, and Soft. The third device is selected, with its details shown in the table below.


On	MAC	Local	Type	Name	Pcb	Soft
1	4868	B4	U011 M-DOT-9		10	10226
2	D13	D13	U017 M-LED-1	LED	3	10056
3	A4DE	A4DE	U023 M-RT-32s	emerte	3	10522

The sidebar on the right contains several options: Device monitor, Device configuration, Device parameters, Network monitor, and Find devices. Below these is a Debugger section showing the message: "Ampio SmartHome device configurator ver. 5.0.0.5317 Interface recognized...".


The condition is created from an M-DOT touch panel. Select the correct module on the configuration list and click *Add condition from device*.

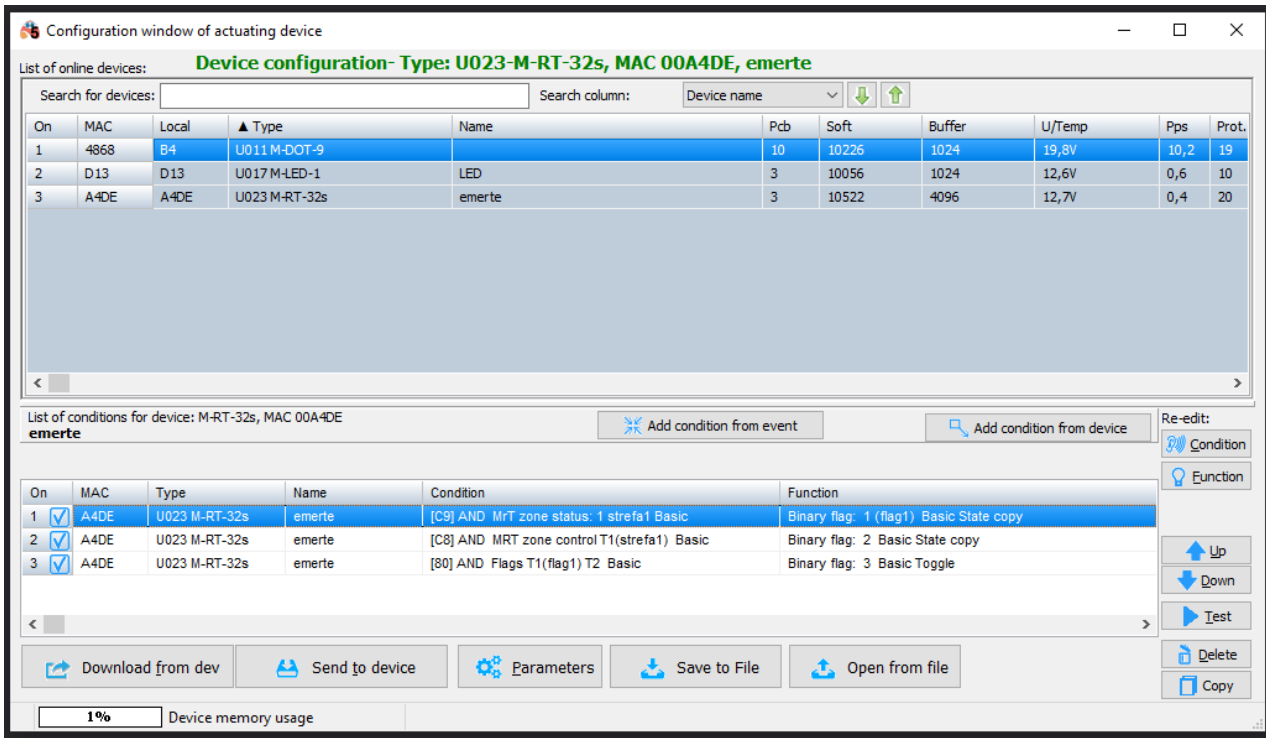


Then, create a function for the condition. In this case, the panel's field number 5 has to be pressed for at least 5 seconds.

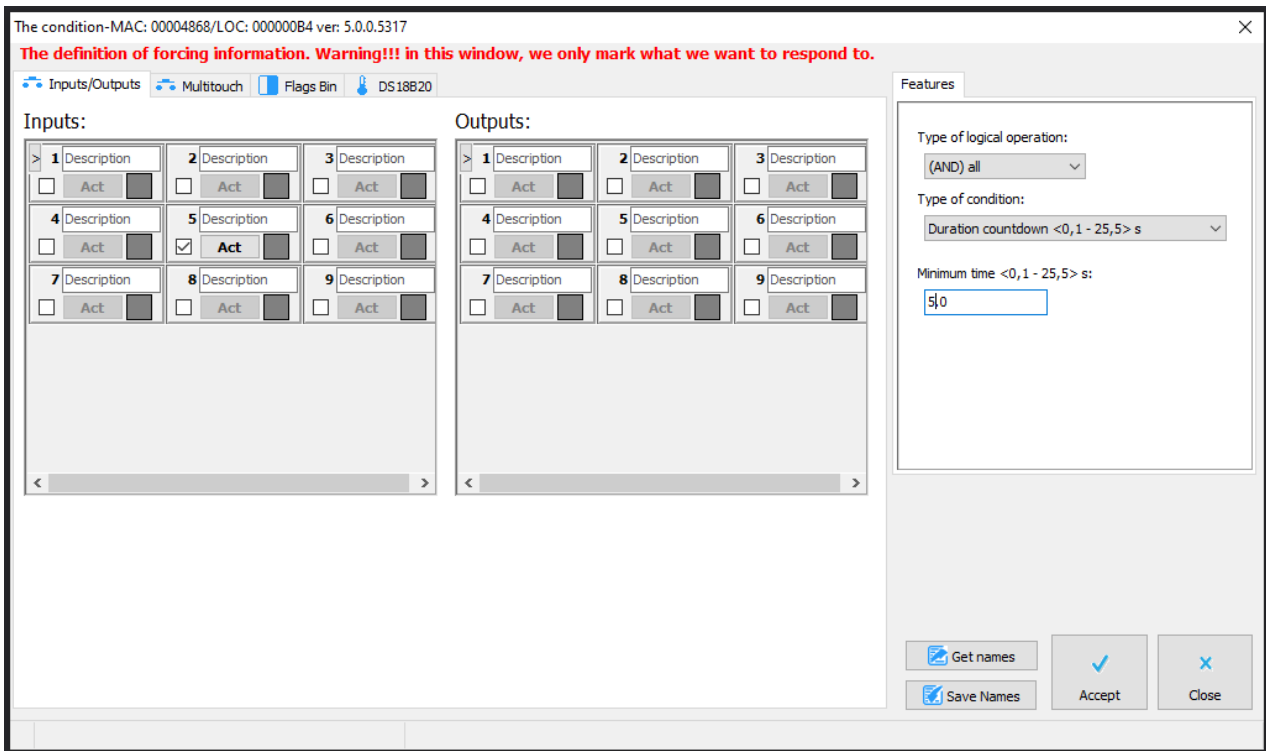

After confirming the function, select the mode (Operation) for a given zone. For the purpose of this example, "Departure on" was chosen.

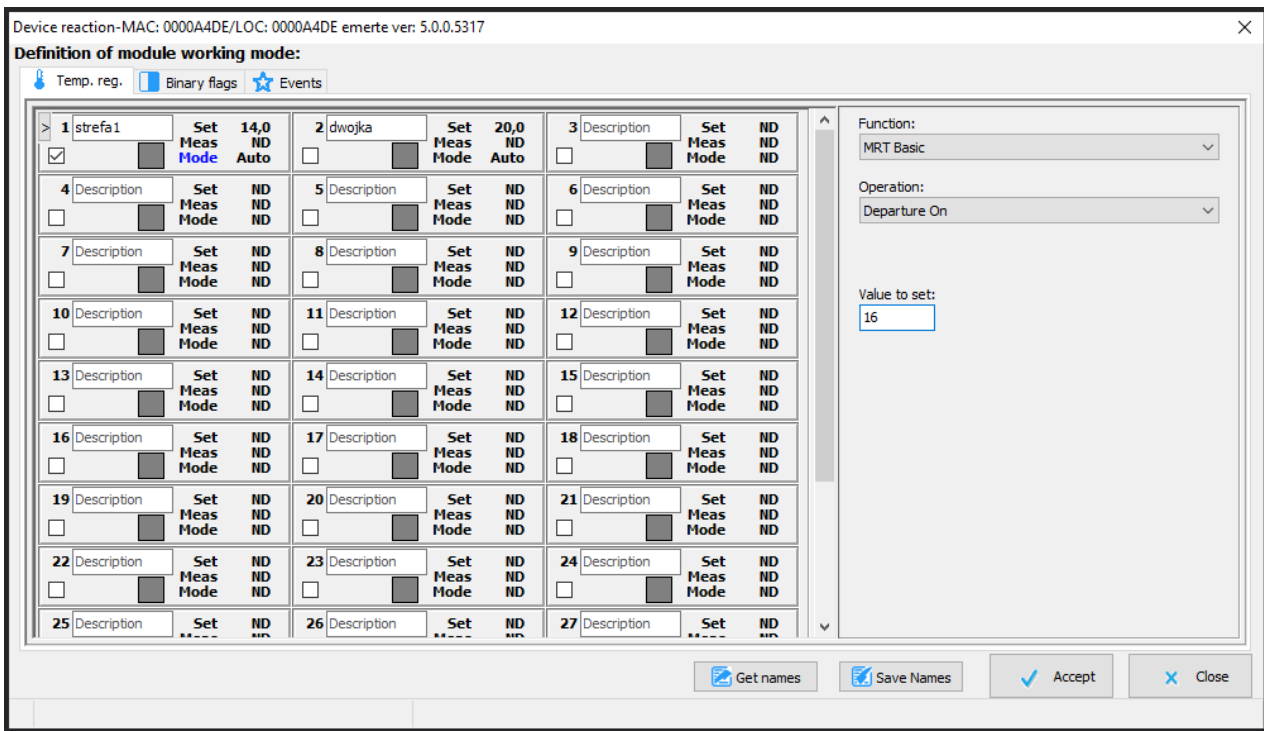

In order to save the new condition, it is necessary to send it to the device.

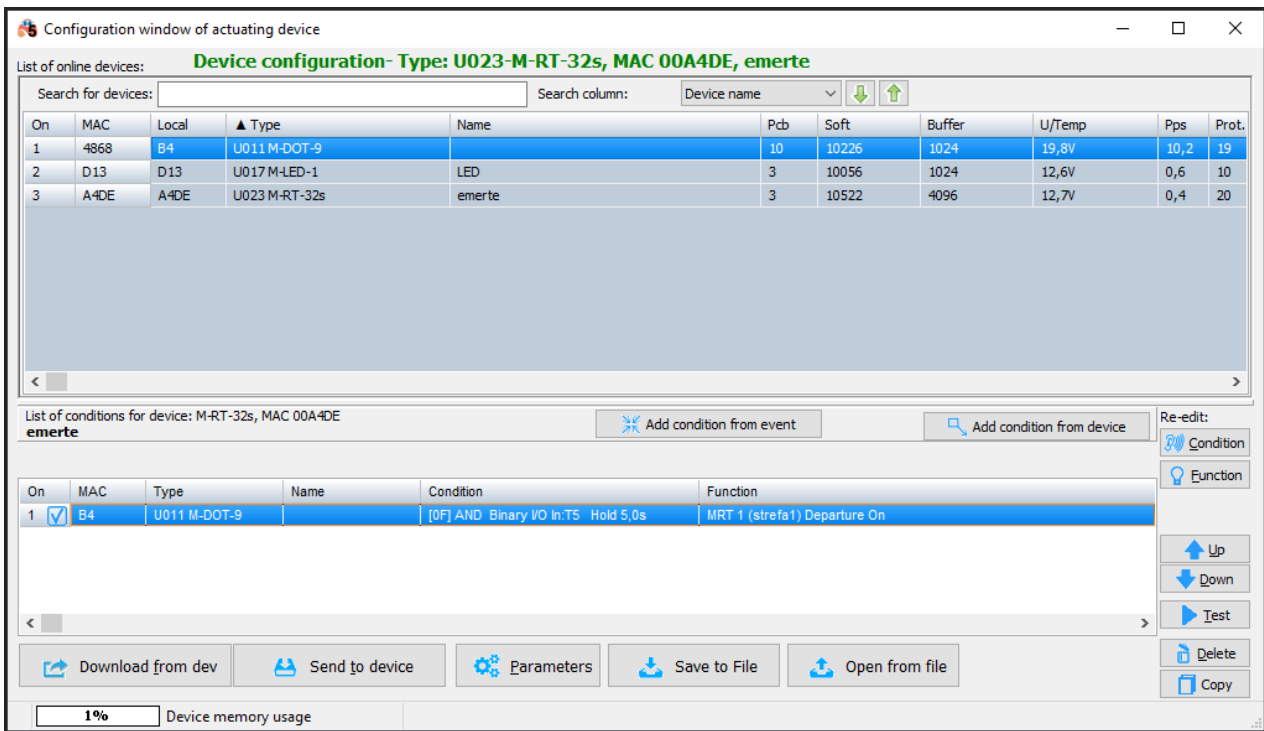

From now on, pressing the right touch field in will initiate the *Departure* mode.