

Adding a wirelessly controlled roller shutter to the mobile app


Document number: PO-217-EN Version: 1.0 Date of publication: April 30, 2024

Introduction

To add a Fakro roller shutter controlled wirelessly according to the Z-wave standard, use the M-CON-ZWAVE-s module.

Adding a roller shutter to the gateway

The first step is to add a new roller shutter to the M-CON-ZWAVE-s module. To do this, in the *Devices* tab, go to *Settings* of the M-CON-ZWAVE-s module (cog icon) and select the ZWAVE tab. Then select the + icon in the top right corner and from the drop down list select *FakroDrive* and press *Start*.

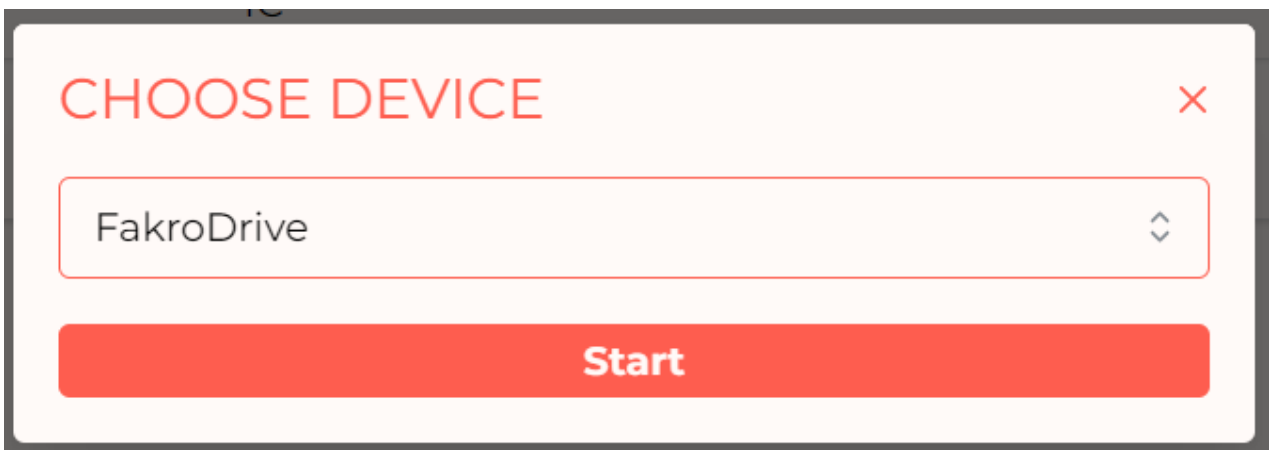


Add the roller shutter to the control unit according to the manufacturer's instructions. Once correctly added, it will appear in the list with a shortened address.



Application configuration in Ampio Designer

Next, add a new object in the *APPLICATION* tab.

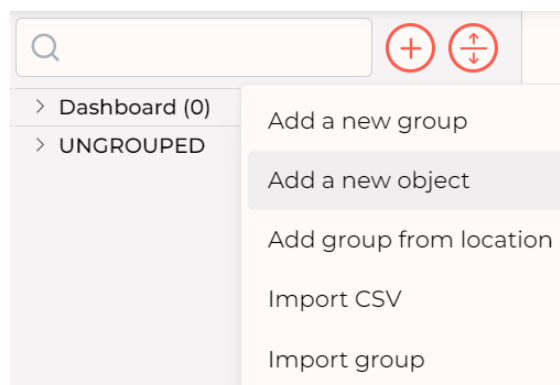

In the object settings, select the full address with the same suffix as the roller shutter received after it had been added, and set *Object Type* to *Roller shutter*. Confirm the object set in this way by pressing *Save* in the top right corner.

GENERAL SETTINGS ^

<input type="checkbox"/>	Device	-	(FakroDrive) (1100001b) ◇
<input type="checkbox"/>	Description	-	Drive
<input type="checkbox"/>	Icon OFF	<input type="checkbox"/>	Choose file
<input type="checkbox"/>	Icon ON	<input type="checkbox"/>	Choose file
<input type="checkbox"/>	Number	-	1
	Object type	-	blinds ◇
	Subtype:	-	blinds ◇