

## M-CON-DL-s: DALI bus Integration module

Document number: PO-031-EN Version: 1.2.0 Date of publication: August 26, 2024



#### **Technical data**

Supply voltage 11 - 16V DC

**Current consumption** 20mA

**Communication interface** Dali

**Number of controlled Dali** devices up to 64 lights

#### Technical data cont.

Dali bus supply voltage

15 - 20V DC

**Maximum current consumption** of the Dali bus power supply

100mA

**Current consumption from the** Dali bus

4mA

#### **Dimensions**

Width

35mm, 2 spaces/modules in

Height (incl. plugs)

110mm

Depth 59mm

**Environment** 

**Temperature**  $-40 - 50^{\circ}C$ 

Humidity

≤95%RH, non-condensing

The image above is for illustration purpose only. The actual module may vary from the one presented here.

### General features

Module M-CON-DL-s is a component of the Ampio system. Required voltage to power the module is 11 - 16V DC. The module is controlled via CAN bus.

The module is intended for integration with lighting with a Dali interface. Dali is the main lighting used in industrial halls, large-format supermarkets and with the ongoing rapid development of automation systems, also in residential buildings.

The module allows one to control up to up to 64 lights lamps. Each lamp can be controlled independently.

Both buses used by the device are galvanically isolated from each other.

# **Built-in Dali power supply**

For proper functioning, the Dali bus requires a specialised power supply to be connected to it. The M-CON-DL-s module can act as such a power supply for the attached Dali bus segment.

As part of the Dali standard, the typical value of the current efficiency of a specialised power supply is defined as 250mA. It should be borne in mind that the current efficiency of the M-CON-DL-s built-in power supply is 100mA. For most Dali bus devices, the bus controllers are powered by power supplies built into the devices, while the bus current load implied by each device is minimal. However, there are devices that are fully bus-powered. If one wants to use such devices, one must verify that the efficiency of the built-in power supply is sufficient.

To use the specialised Dali power supply built into the module, an additional 15 - 20V DC power source must be attached to the module.

### **Installation**

The module is designed for mounting on a 35mm DIN rail. The module's width is 35mm, 2 spaces/modules in DB. In order to start the module, it must be connected to the CAN bus. The bus of the Ampio system consists of four wires - two for power and two for communication between the modules.

In addition to the CAN bus connector, the device has a connector that provides two communication lines constituting the Dali bus (D + and D-) and a connector for an additional power source necessary if one wants to use the built-in specialised Dali bus power supply.

### **Device status LEDs**

On the front of the module there are signalling LED indicators. The green LED with the label CAN indicates the status of communication on the CAN bus:

- · one regular flash every 1 sec. CAN bus communication is working properly,
- two regular flashes every 1 sec. the module is not receiving information from other modules,
- three regular flashes every 1 sec. the module cannot send information to the CAN bus;

Apart from the LED indicating the communication bus status, there are two red LEDs on the front of the device:


- · ERROR signals a failure of the Dali bus;
- STATUS indicates that the device is receiving or sending data to the Dali bus.

## **Programming**

The module is programmed with the use of the Ampio Designer software. It allows you to modify the parameters of the module and define its behaviour in response to signals directly available to the module as well as general information coming from all devices present in the home automation bus.

## **Module dimensions**

Dimensions expressed in millimeters.

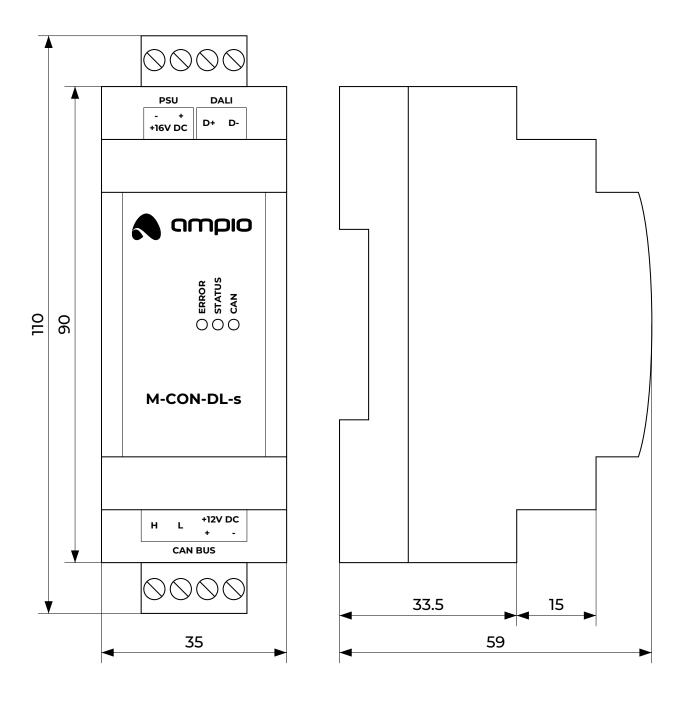

# **Connection diagram**

The wiring diagram shown on the left is suitable for smaller systems with a small number of controllers. Above 20 Dali controllers, use the diagram with the dedicated power supply shown on the right.

